



## INSTRUCTION MANUAL 《CASH BOX CB-8300 / CB-8350》

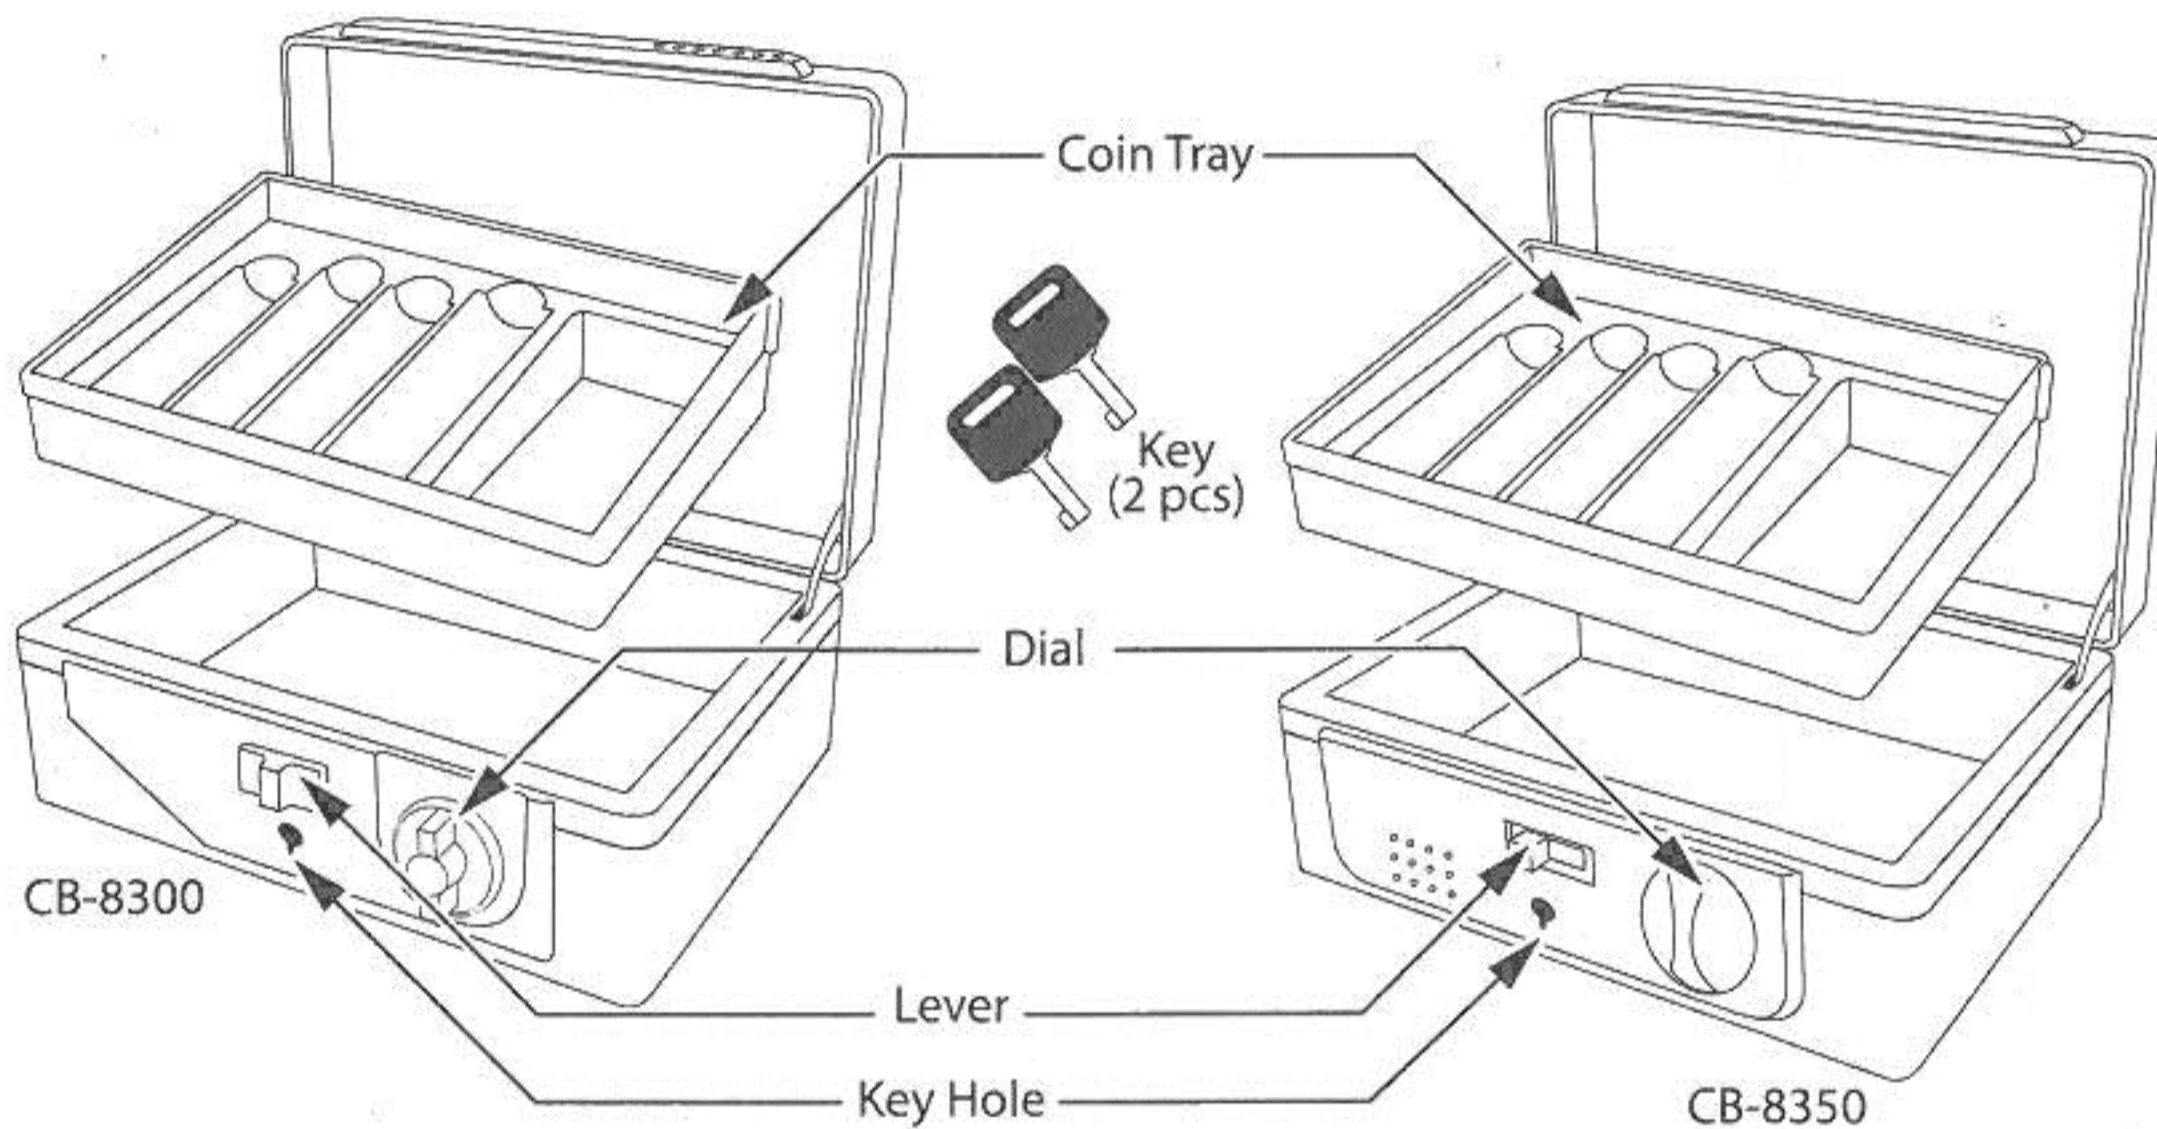

### ■ How to Open the Cover

1. Turn the dial knob to the mark provided following and adjusting to the designated number.
2. Slide the lever to the right direction to open the cover.

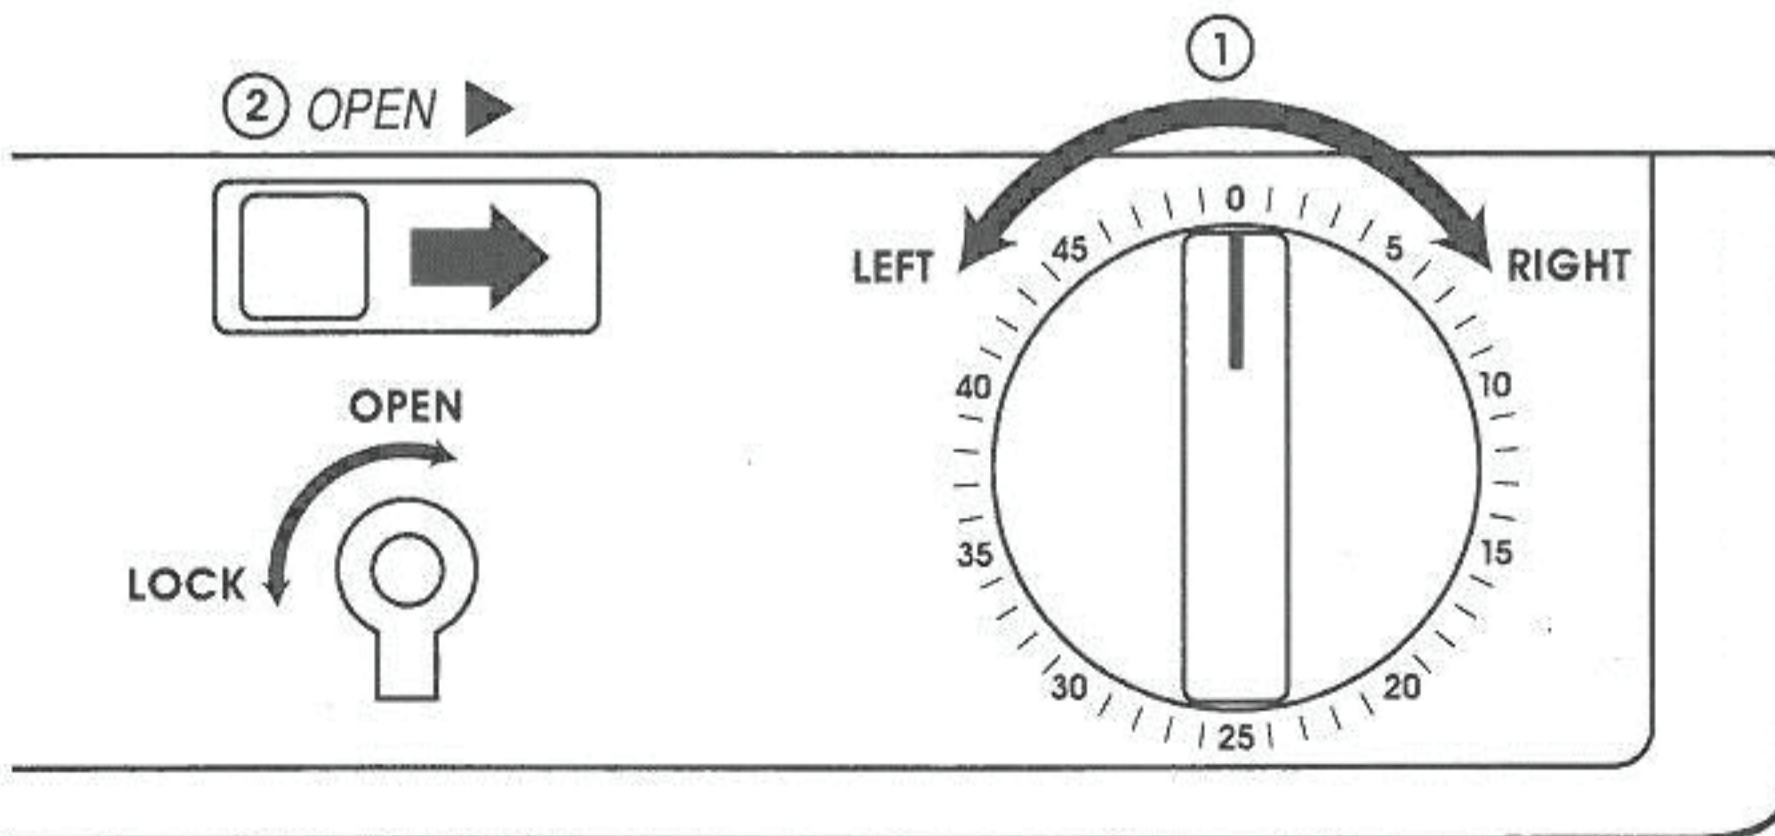

Your dial number

### ■ How to Close the Cover

1. Quietly close the cover.
2. Turn the dial knob to any number except the designated number.

### ■ When Using the Lock

Insert the key into the key hole and turn left to lock. Turning it to the right direction will unlock the cover.

### ■ Precautions

1. When using the cash box, do not use in unsafe places.
2. Be careful not to insert your hand or finger in the cover when closing. It may cause injury.
3. Do not put the extra key and tag number inside the cash box. In addition, keep the key and the tag number in separate places.
4. Open and close the cover quietly.
5. To prevent robbery, make sure to lock the key and dial lock properly.

Please keep this instruction manual securely.